


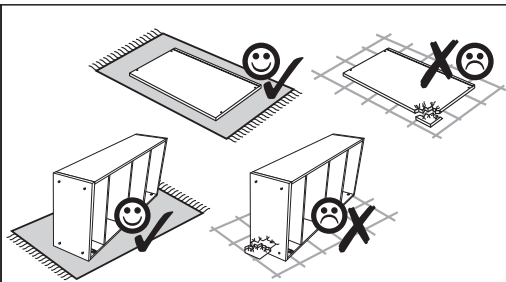
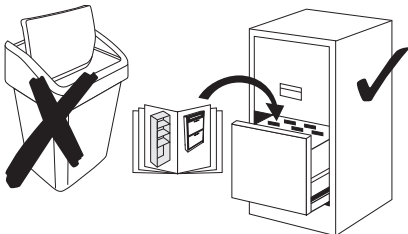


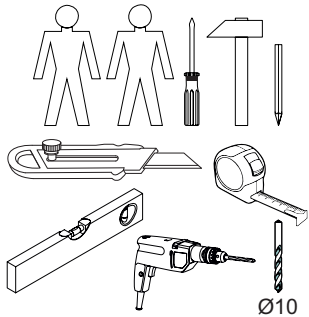

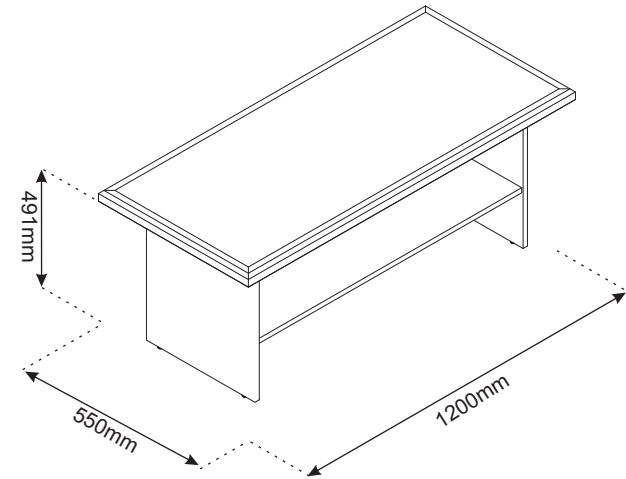

Instrukcja montażowa


LAW/120 RIVA

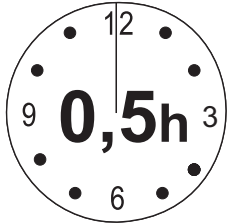






Kode	Ausmaß			Anzahl	Paket
002	968	388	16	1	1/1
003	470	398	16	2	1/1
004	968	100	16	1	1/1
087	1200	550	44	1	1/1
Zubehör				1	1/1

Aksesoria:


<p>10x f1 Ø8x30</p> 	<p>12x r1 15x12</p> 	<p>12x r16 Ø5x24</p> 	<p>4x k1</p> 
<p>12x s2</p> 	<p>1x z1</p> 		

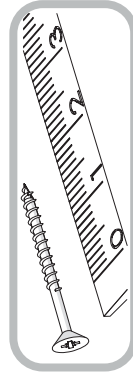


- 1**
- | | | | |
|-----|-----|-----|----|
| r1 | f1 | r16 | k1 |
| x12 | x10 | x12 | x4 |

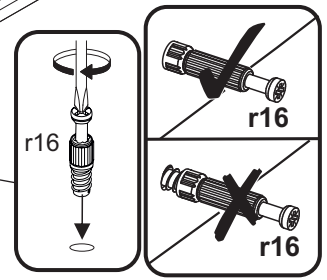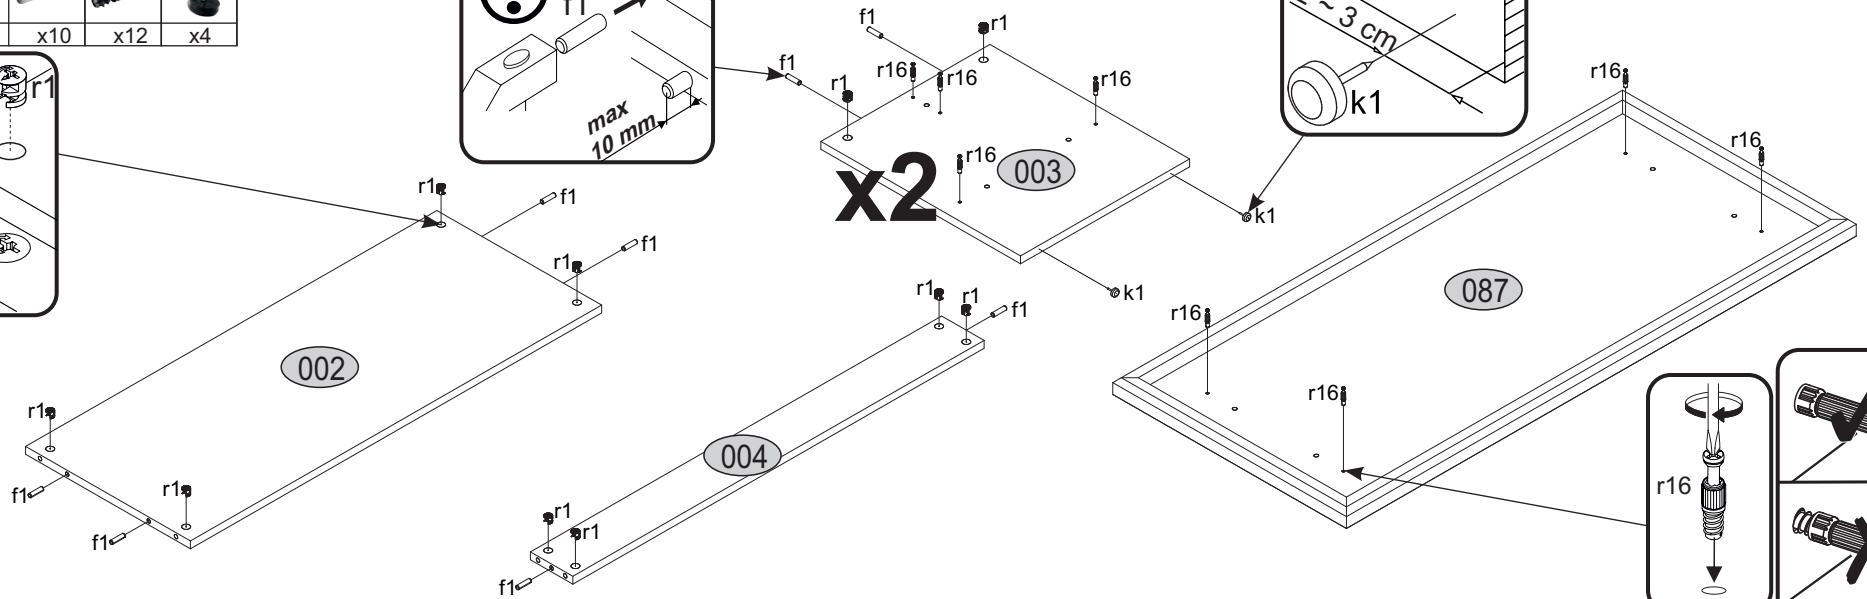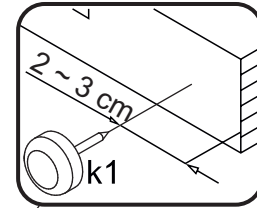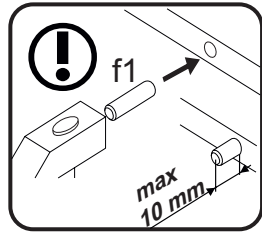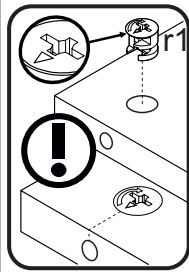

2

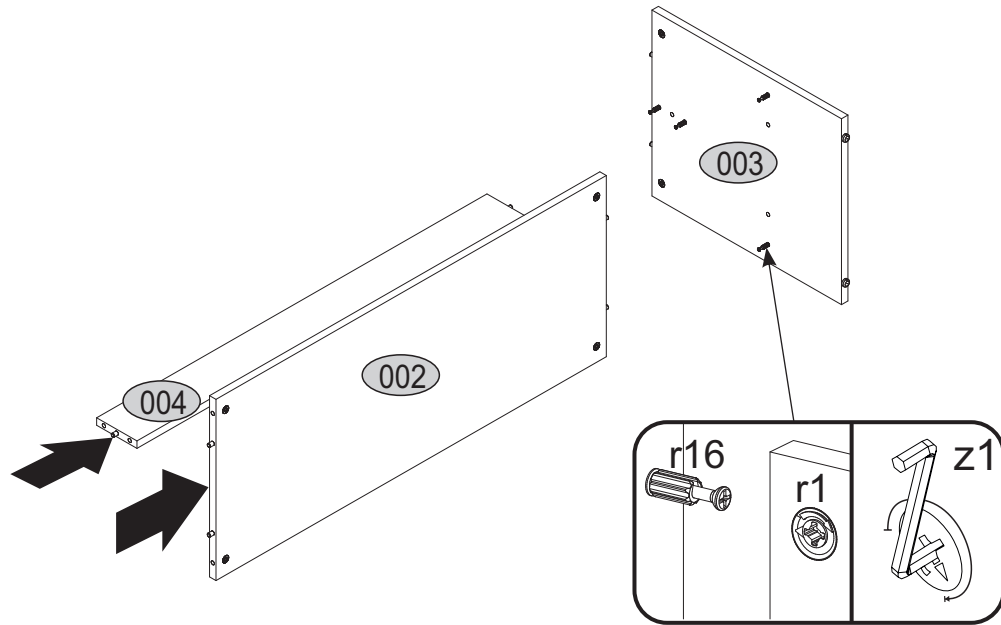

3

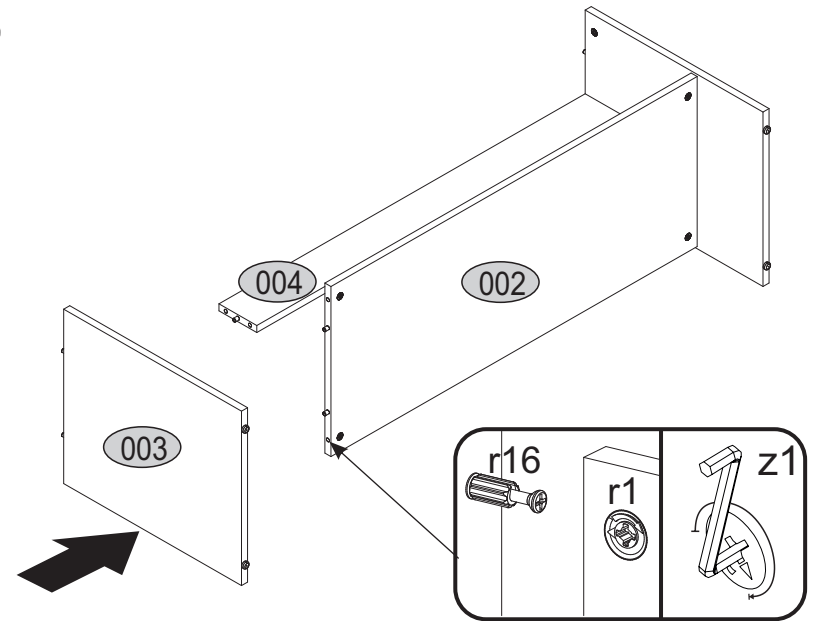

4

s2
x12

